


## Installation and user manual

Passive heat sink for poweradjust 3 USB (not included). The heat sink can be mounted directly on top of the poweradjust 3 controller, please proceed as follows:

1. Disconnect the poweradjust 3 from the PSU, then disconnect all cables from the poweradjust 3.
2. Remove the three screws indicated by green markings in the figure.

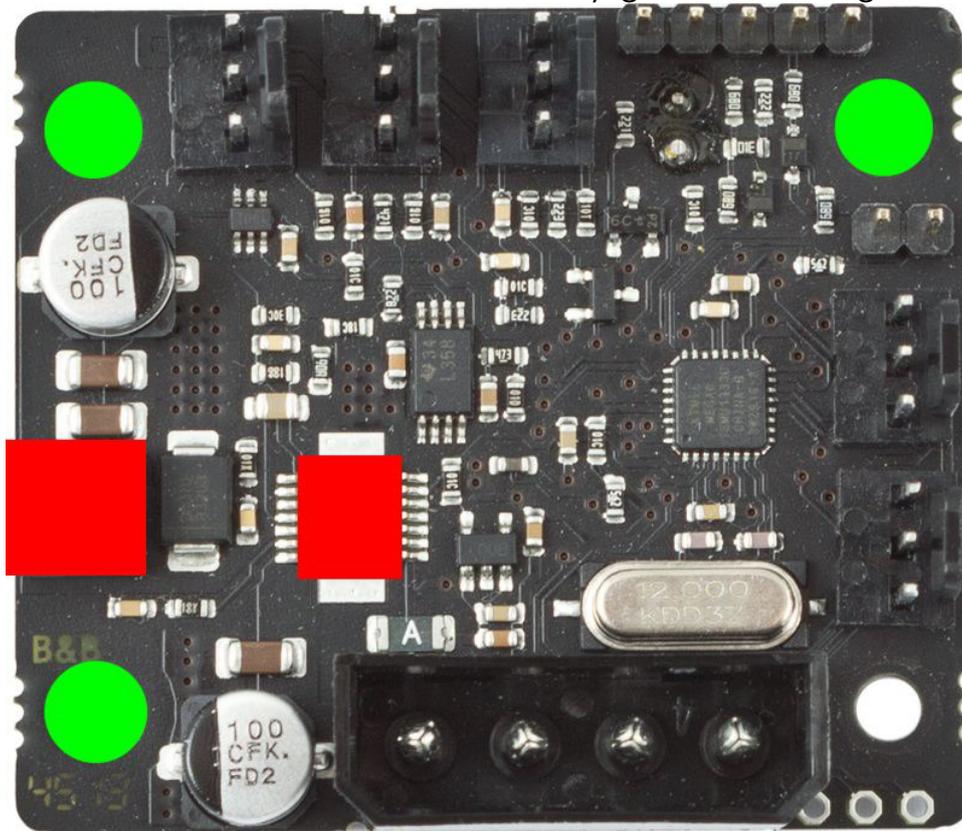

3. Cut fitting pieces from the thermally conductive pad supplied with the heat sink and place them on top of the components indicated by red rectangles in the figure.
4. Place the heat sink onto the poweradjust PCB and secure heat sink and PCB using three bolts M3 x 10 mm supplied with the heat sink.
5. Replace the remaining screw with a bolt M3 x 10 mm and a M3 nut supplied with the heat sink.
6. Connect all previously removed cables to the poweradjust 3.